

Important Use & Care Instructions

Please read these instructions carefully prior to using the Flavor Enhancer™

CAUTION: For your safety, ensure the Flavor Enhancer™ is in the LOCKED position (✕) when not in use. Keep out of reach of children.



For thicker meats



Locked position



For thinner meats

TO ADD MARINADE/TENDERIZE:

1. Pull up plunger and remove completely from marinade tube. Pour desired marinade up to (but not exceeding) the fill level (3 oz.).
2. Replace plunger and unlock Flavor Enhancer™ to your desired piercing depth. ▽ represents piercing depth for thinner pieces of meat; ● represents piercing depth for thicker pieces of meat.
3. Insert needles into the meat and push down while depressing the plunger. Repeat until marinade is gone.
4. To tenderize without injecting marinade, choose setting based on meat thickness and press Flavor Enhancer™ down repeatedly into meat with marinade tube unfilled.



TO CLEAN:

1. Ensure the Flavor Enhancer™ is in the LOCKED position (✕).
2. Firmly grasp the body of the Flavor Enhancer™ with one hand and grasp marinade tube with the other hand. Twist counter-clockwise and pull up. Wash the plunger, marinade tube and body of the Flavor Enhancer™ by hand or in the top dishwasher rack.
3. To reattach the marinade tube, insert it into the top of the body of the Flavor Enhancer™, push down and twist clockwise.

Find a short instructional video for the Flavor Enhancer™ in the FAQ section of our website (www.chefsplanet.com)



chef'splanet
clever products. joyful living.

© 2013 Chef's Planet. All rights reserved.
1.877.703.8889

Important Use & Care Instructions

Please read these instructions carefully prior to using the Flavor Enhancer™

CAUTION: For your safety, ensure the Flavor Enhancer™ is in the LOCKED position (✕) when not in use. Keep out of reach of children.



For thicker meats



Locked position



For thinner meats

TO ADD MARINADE/TENDERIZE:

1. Pull up plunger and remove completely from marinade tube. Pour desired marinade up to (but not exceeding) the fill level (3 oz.).
2. Replace plunger and unlock Flavor Enhancer™ to your desired piercing depth. ▽ represents piercing depth for thinner pieces of meat; ● represents piercing depth for thicker pieces of meat.
3. Insert needles into the meat and push down while depressing the plunger. Repeat until marinade is gone.
4. To tenderize without injecting marinade, choose setting based on meat thickness and press Flavor Enhancer™ down repeatedly into meat with marinade tube unfilled.



TO CLEAN:

1. Ensure the Flavor Enhancer™ is in the LOCKED position (✕).
2. Firmly grasp the body of the Flavor Enhancer™ with one hand and grasp marinade tube with the other hand. Twist counter-clockwise and pull up. Wash the plunger, marinade tube and body of the Flavor Enhancer™ by hand or in the top dishwasher rack.
3. To reattach the marinade tube, insert it into the top of the body of the Flavor Enhancer™, push down and twist clockwise.

Find a short instructional video for the Flavor Enhancer™ in the FAQ section of our website (www.chefsplanet.com)



chef'splanet
clever products. joyful living.

© 2013 Chef's Planet. All rights reserved.
1.877.703.8889